


# Multi RS Solar 48/6000 Hybrid Inverter

www.aeppacific.co.nz

## With 450 V dual tracker PV input



Multi RS Solar 48/6000 dual tracker

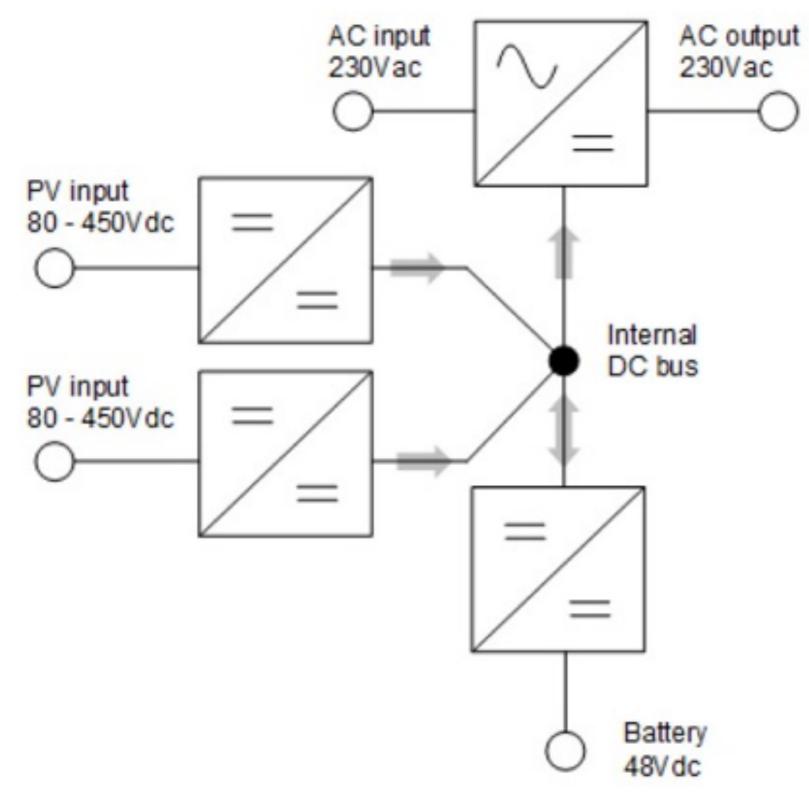

Inside the Multi RS Solar dual tracker

#### Operating modes

**Hybrid mode** – Stores excess solar energy in a battery, to be used during the night or periods of high demand. Supplies additional power from the battery when demand exceeds grid capacity.

Backup mode - Switches to backup mode during a grid outage.

Off-grid mode - Operates without grid connection.

**Generator mode** – Controls the generator to minimize run-hours. Supplies additional power from the battery when demand exceeds the capacity of the generator.

#### PowerControl and PowerAssist - Boosting the capacity of the grid or a generator

A maximum grid or generator current can be set. The Multi RS will then take account of other AC loads and use whatever is extra for battery charging, thus preventing the generator or grid from being overloaded (PowerControl function).

PowerAssist takes the principle of PowerControl to a further dimension. Where peak power is so often required only for a limited period, the Multi RS will compensate insufficient generator or grid power with power from the battery. When the load reduces, the spare power is used to recharge the battery.

#### Display, Bluetooth and VictronConnect app

The display reads battery, inverter and solar parameters. The same parameters can be accessed with a smartphone or other Bluetooth enabled device, using the VictronConnect app.

#### Extendable PV capacity, both AC-coupled and DC-coupled


The integrated 6 kWp PV capacity can be extended by adding solar chargers to the system. Alternatively, the PV capacity can be extended by installing PV Inverters, of which the output power will be automatically controlled by the integrated frequency shift power control.

#### **Communication ports**

VE.Can connection to a GX device for system monitoring, data logging, and remote firmware updates. VE.Direct connection to a GlobalLink 520 for remote data monitoring.

### I/O Connections


Programmable relay, temperature sensor and voltage sensor connections.

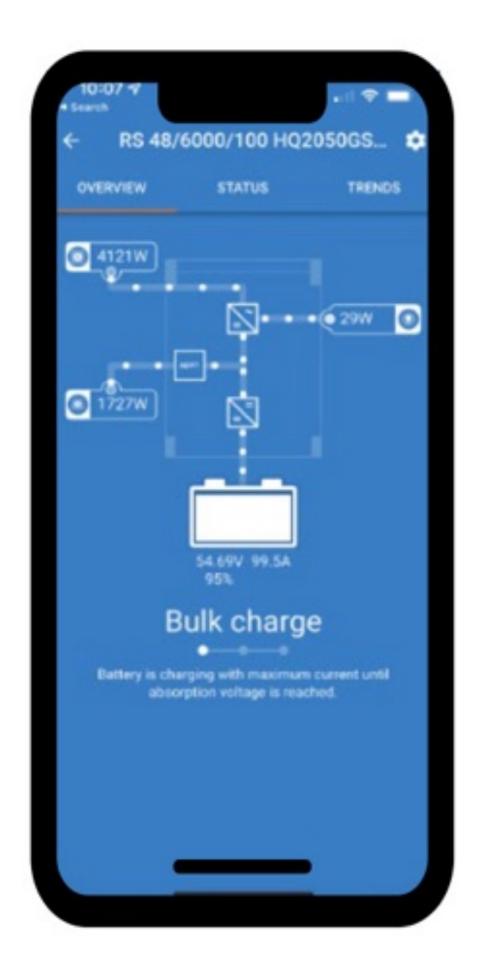



Configure and monitor with VictronConnect

A built in Bluetooth Smart connection allows for quick
monitoring or settings adjustment of the Multi RS.

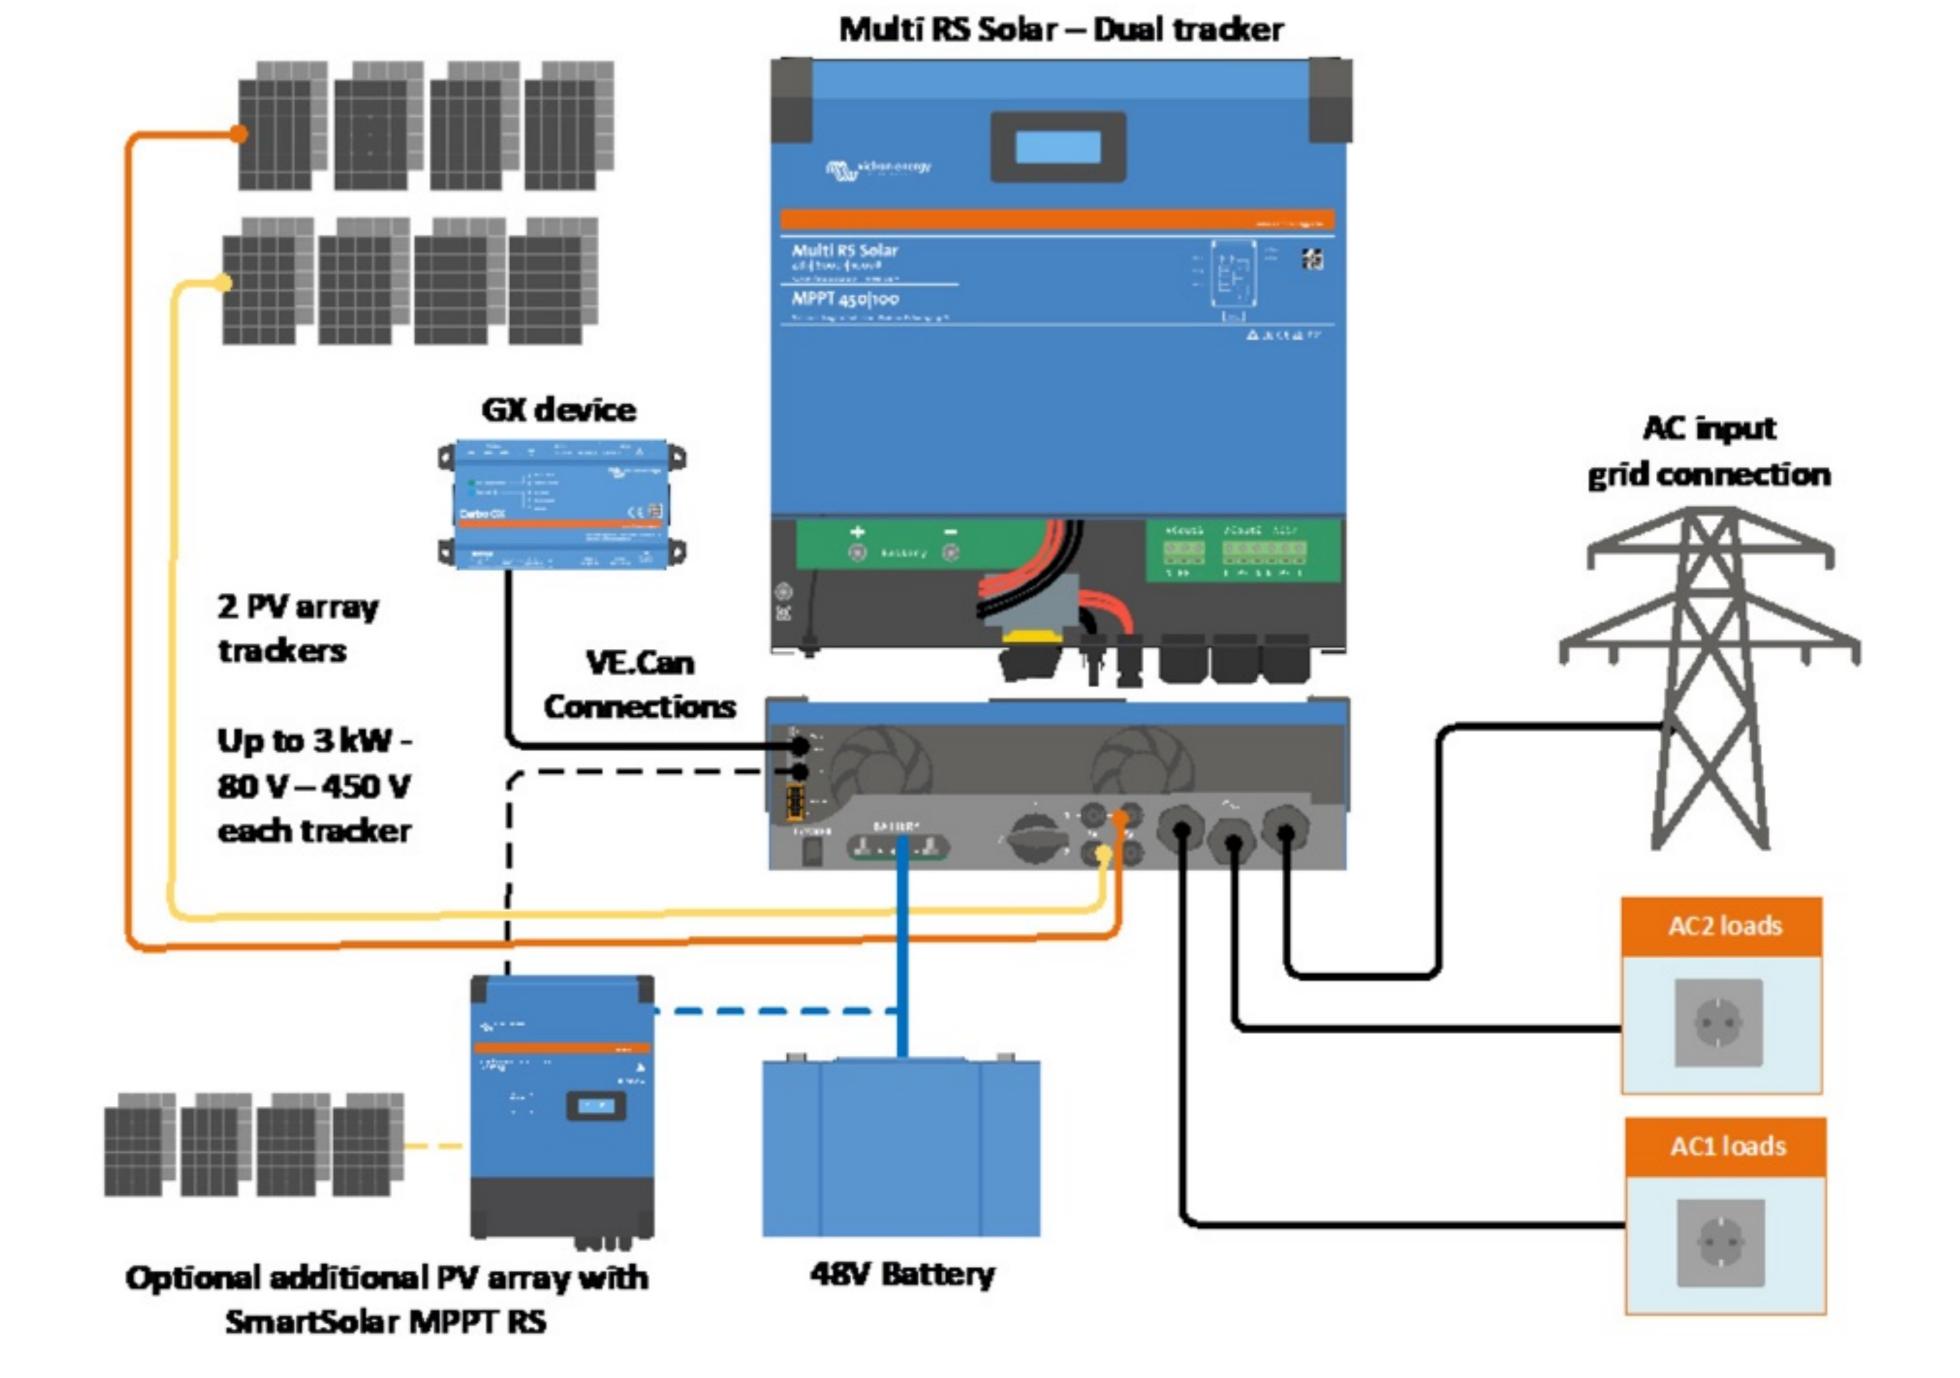





| Multi RS Solar 48/6000 Dual Tracker                        |  |
|--|--|
| PowerControl & PowerAssist                                 | Yes  |
| Transfer switch  | 50 A   |
| Maximum AC input and pass-through current                  | 50 A   |
| DC Input voltage range (1)                                 | INVERTER<br>38 – 62 V  |
| De input voitage range                                     | Output voltage: 230 VAC ± 2 %  |
| AC Output (2)  | Frequency: 50 Hz ± 0,1 %   |
|  | Maximum continuous inverter current: 25 Aac  |
| Continuous output power at 25 °C                           | Increases linearly from 4800 W at 46 VDC<br>to 5300 W at 52 VDC  |
| Continuous output power at 40 °C                           | 4500 W   |
| Continuous output power at 65 °C                           | 3000 W   |
| Peak power (3)   | 9 kW for 3 seconds   |
| Peak power **  | 7 kW for 4 minutes   |
| Short-circuit output current                               | 45 A   |
| Max. AC output overcurrent protection                      | 30 A   |
| Efficiency   | 96,5 % at 1 kW load<br>94 % at 5 kW load   |
| Zero load power consumption                                | 20 W   |
| Low Battery shutdown                                       | 37.2 V (adjustable)  |
| Low battery restart  | 43.6 V (adjustable)  |
|  | SOLAR  |
| Maximum open circuit PV array voltage (4)                  | 450 V  |
| Start-up voltage   | 120 V  |
| MPPT operating voltage range                               | 65 – 450 V   |
| Maximum operational PV input current limit                 | 13 A   |
| Maximum PV conversion power                                | 6 kW total – 3 kW per tracker  |
| Maximum PV short circuit current                           | 16 A   |
| Earth leakage trip level                                   | 30 mA  |
| Isolation fail level (detection before start-up)           | 100 kΩ   |
|  | CHARGER<br>Nominal Voltage: 230 VAC, Input voltage range: 187-265 VAC  |
| AC Input   | Nominal frequency: 50 Hz, Input frequency: 45-65 Hz  |
|  | AC inrush current: NA  |
| Programmable charge voltage range (5)                      | 36 – 60 V  |
| Charge voltage 'absorption'                                | Default setting: 57,6 V (adjustable)   |
| Charge voltage 'float'                                     | Default setting: 55,2 V (adjustable)   |
| Maximum charge current from AC (6)                         | 88 A @ 57,6 VDC  |
| Total maximum charge current (AC + PV)                     | 100 A DC   |
| Battery temperature sensor                                 | Included   |
| Battery voltage sense                                      | CENIEDAL   |
| Auviliany output (AC out 2) (7)                            | GENERAL  |
| Auxiliary output (AC-out-2) (7)                            | Yes  |
| 3-phase and parallel operation Programmable relay (8)      | 3-phase support with one unit per phase. Parallel not supported. Yes   |
| Protections (9)  |  |
| Data communications ports (10)                             | a - g<br>VE.Direct, VE.Can & Bluetooth   |
| Bluetooth frequency & power                                | 2402 - 2480 Mhz, 4 dBm   |
| Programmable analog/digital input/output ports             | Yes, 2x  |
| Remote on-off  | Yes  |
| Operating temperature range                                | -40 to +65 °C (fan assisted cooling)   |
| Maximum altitude   | 2000 m   |
| Humidity (non-condensing)                                  | max 95 %   |
|  | ENCLOSURE  |
| Material & Colour  | steel, blue RAL 5012   |
| Protection category  | IP21 Protective Class: I   |
| Battery-connection   | M8 bolts   |
| PV Connection  | 2 strings, each with positive and negative MC4   |
| 230 VAC-connection   | Screw terminals 10 mm² (6 AWG)   |
| Weight   | 12,3 kg  |
| Dimensions (hxwxd)   | 462 x 425 x 127 mm   |
| Safety   | STANDARDS<br>EN-IEC 60335-1, EN-IEC 60335-2-29, EN-IEC 62109-1, EN-IEC 62109-2   |
|  | EN-1EC 60333-1, EN-1EC 60333-2-29, EN-1EC 62109-1, EN-1EC 62109-2  EN 55014-1, EN 55014-2, EN-IEC 61000-3-2, EN-IEC 61000-3-3, IEC 61000-6-1, IEC 61000-6-2, |
| Emission, Immunity   | IEC 61000-6-3, Pollution Degree 2  |
| Overvoltage Category                                       | Battery: OVC 1, PV port: OVC II, AC in / AC out: OVC III   |
| 1) Minimum start-up voltage is 41 VDC. Over-voltage discon |  |

<sup>1)</sup> Minimum start-up voltage is 41 VDC. Over-voltage disconnect: 65,5 V. 2) Can be adjusted to 240 VAC and 60 Hz

4) The maximum PV voltage should not exceed 8x battery float voltage.

If for example the float voltage of the battery is 50 V, the maximum PV voltage should not exceed 8 x 50 = 400 V.

5) The Charger set points (float & absorption) can be set to max 60 V.

The output voltage at the charger terminals can be higher due to compensation

for temperature & voltage drop over the battery cables.

- The maximum output current is reduced on a linear basis from full current at 60 V to
- 5 A at 62 V. The equalization voltage can be set to max 62 V, the equalization current percentage can be set to max 6 %.
- 6) The maximum charge current from AC sources depends on input voltage and battery current. At 230V input and 57.6V battery voltage, and 25C ambient, the maximum charge current is 88 A. See manual, limitations section, for further details.
- 7) AC-out-2 is connected directly to the AC input and intended for non-critical loads. The AC-out-2 load is taken into account by PowerControl & PowerAssist.

  8) Programmable relay which can be set for general alarm, DC under voltage or genset start/stop function. DC rating: 4 A up to 35 VDC and 1 A up to 70 VDC

  9) Protection key: a) output short circuit b) overload c) battery voltage too high d) battery voltage too low e) temperature too high f) 230 VAC on inverter output g) solar
- earth leakage.
- 10) Not currently compatible with VE.Smart Networks. Connection to a GX device (i.e. Cerbo GX) must be made via the VE.Can interface. The VE.Direct interface is for connection to the GlobalLink 520.

<sup>3)</sup> Peak power capacity and duration depends on start temperature of heatsink. Mentioned times are with cold unit.