

Quattro-II Inverter/Charger

www.victronenergy.co.nz



A Quattro, plus ESS (Energy Storage System) functionality

The Quattro-II can be connected to two independent AC sources, for example the public grid and a generator, or two generators. The Quattro-II will automatically connect to the active source.

PowerControl and PowerAssist - Boosting the capacity of the grid or a generator

A maximum grid or generator current can be set. The Quattro-II will then take account of other AC loads and use whatever is extra for battery charging, thus preventing the generator or grid from being overloaded (PowerControl function)

PowerAssist takes the principle of PowerControl to a further dimension. Where peak power is so often required only for a limited period, the Quattro-II will compensate insufficient generator, shore or grid power with power from the battery. When the load reduces, the spare power is used to recharge the battery.

Solar energy: AC power available even during a grid failure

The Quattro-II can be used in off grid as well as grid connected PV and other alternative energy systems. It is compatible with both solar charger controllers and grid-tie inverters.

Two AC Outputs

The main output has no break functionality. The Quattro-II takes over the supply to the connected loads in the event of a grid failure or when shore/generator power is disconnected. This happens so fast (less than 20 milliseconds) that computers and other electronic equipment will continue to operate without disruption.

The second output is live only when AC is available on the input. Loads that should not discharge the battery, like a water heater for example, can be connected to this output.

Parallel and three phase operation

Up to 6 Quatros can operate in parallel to achieve higher power output. Six 48/5000/70 units, for example, will provide $25 \, \text{kW} / 30 \, \text{kVA}$ output power with $420 \, \text{Amps}$ charging capacity.

In addition to parallel connection, three units of the same model can be configured for three phase output, and up to 6 sets of three units can be parallel connected per phase for a 75 kW / 90 kVA inverter and more than 1200 Amps charging capacity.



Settings can be changed in a matter of minutes with VEConfigure software (computer or laptop and MK3-USB interface needed).

Several monitoring and control options are available: Cerbo GX, Color Control GX, Venus GX, Octo GX, CANvu GX, Iaptop, computer, Bluetooth (with the optional VE.Bus Smart dongle), Battery Monitor, Digital Multi Control Panel.




Install a Cerbo GX or other GX product to connect to the internet.

Operational data can be stored and displayed on our VRM (Victron Remote Management) website, free of charge. When connected to the internet, systems can be accessed remotely, and settings can be changed.




Connection Area Quattro-II 48/5k

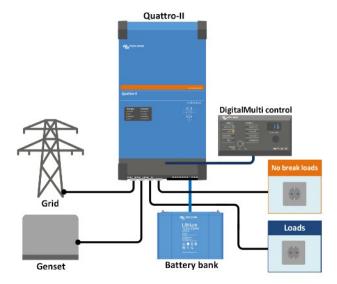

Standard marine, mobile or off-grid application

Loads that should shut down when AC input power is not available can be connected to a second output. These loads will be taken into account by the PowerControl and PowerAssist function in order to limit AC input current to a safe value when AC power is available.

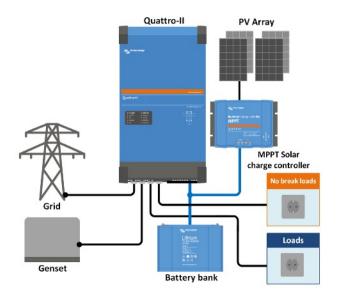

Application with MPPT solar charge controller





Ekrano GX or Cerbo GX

Provides intuitive system control and monitoring and enables access to our free remote monitoring website: the VRM Online Portal.



VRM Portal

Our free remote monitoring website (VRM) will display all your system data in a comprehensive graphical format. System settings can be changed remotely via the portal. Alarms can be received by e-mail or push notification.



VRM app

Monitor and manage your Victron Energy system from your smart phone and tablet. Available for both iOS and Android.

Ye 50 50 INVERTER 19–33 V Output voltage: 230 VAC ± 2 % 5000 4000 3700 3000 5000 9000 96 18 12 V CHARGER Input voltage rang Input frequency: 45 – 65 228,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi	38-66 V Frequency: 50 Hz ± 0,1 % (1) DVA DW DW DW DW DW W W W W W W Frequency: 50 Hz ± 0,1 % (1) DVA DOW
19–33 V Output voltage: 230 VAC ± 2 % 5000 4000 3700 3000 5000 9000 966 181 12 V CHARGER Input voltage rang Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	38-66 V Frequency: 50 Hz ± 0,1 % (1) 0 VA 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W
INVERTER 19–33 V Output voltage: 230 VAC ± 2 % 5000 4000 3700 3000 5000 9000 960 181 121 2 V CHARGER Input voltage ram Input frequency: 45 – 63 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an	38-66 V Frequency: 50 Hz ± 0,1 % (1) OVA OW
19–33 V Output voltage: 230 VAC ± 2 % 5000 4000 3700 3700 5000 9000 966 18 11 121 2 V CHARGER Input voltage rans Input frequency: 45 – 65 28,8 / 5 27,6 / 9 26,4 / 9 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an	Frequency: 50 Hz ± 0,1 % (1) 0 VA 0 W 0 W 0 V 0 W 0 V 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W
Output voltage: 230 VAC ± 2 % 5000 4000 3700 3700 5000 9000 966 18 1 12 2 V CHARGER Input voltage rang Input voltage rang Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	Frequency: 50 Hz ± 0,1 % (1) 0 VA 0 W 0 W 0 V 0 W 0 V 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W 0 W
5000 4000 3700 3700 3700 50000 9000 961 181 121 2 V CHARGER Input voltage rang Input frequency: 45 – 6; 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	OVA OW
4000 3700 3700 3700 3000 5000 9000 96 18 12 2 V CHARGER Input voltage rang Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an	D W D W D W D W D W O W W W W W W W See: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 55,2 V 52,8 V 70 A See phase operation, and system integration
3700 3000 5000 9000 966 181 122 2 V CHARGER Input voltage rang Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an	D W D W D W D W D W W W W W W W S S S S S S S S S S S S S
3000 5000 9000 9000 96 181 121 2 V CHARGER Input voltage ram Input frequency: 45 – 65 28,8 / 5 27,6 / 9 26,4 / 9 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	D W D VA D VA D W % W W W N ge: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g g ge phase operation, ed system integration
5000 9000 961 181 121 2 V CHARGER Input voltage range Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an	ge: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g ge phase operation, ad system integration
9000 96 181 121 2 V CHARGER Input voltage rang Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an	96 W 96 W W W W W W Se: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A PS Sitches off when in inverter mode phase operation, and system integration
96 18 12 12 12 12 12 12 12 12 12 12 12 12 12	% W W N ge: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g ge phase operation, id system integration
CHARGER Input voltage rang Input frequency: 45 – 65 22,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	ge: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g ge phase operation, ed system integration
CHARGER Input voltage ram Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	ge: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g se phase operation, ad system integration
CHARGER Input voltage range Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	ge: 187-265 VAC 5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g ge phase operation, ed system integration
Input voltage range Input frequency: 45 – 63 28,87 5 27,67 5 26,47 5 120 A Yes (32 A) Default setting: swi Ye a – For parallel and three remote monitoring an Yes,	5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g g pe phase operation, ed system integration
Input frequency: 45 – 65 28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	5 Hz power factor: 1 57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g g pe phase operation, ed system integration
28,8 / 5 27,6 / 5 26,4 / 5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	57,6 V 55,2 V 52,8 V 70 A es itches off when in inverter mode es g ge phase operation, ed system integration
27,6 / 5 26,4 / 3 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and three remote monitoring an Yes,	55,2 V 52,8 V 70 A es itches off when in inverter mode es g the phase operation, and system integration
26,4/5 120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	52,8 V 70 A es itches off when in inverter mode es g the phase operation, and system integration
120 A Ye GENERAL Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	70 A es itches off when in inverter mode es g se phase operation, ed system integration
Yes (32 A) Default setting: swi Yes (32 A) For parallel and thre remote monitoring an Yes,	itches off when in inverter mode is g ge phase operation, id system integration
Yes (32 A) Default setting: swi Ye a – For parallel and thre remote monitoring an Yes,	es g te phase operation, ad system integration
Ye a – For parallel and thre remote monitoring an Yes,	es g te phase operation, ad system integration
a – For parallel and thre remote monitoring an Yes,	g ee phase operation, nd system integration
For parallel and thre remote monitoring an Yes,	ee phase operation, and system integration
remote monitoring an Yes,	nd system integration
Yes,	
re	25
-40 to +65 °C (fan	assisted cooling)
max 9	95 %
ENCLOSURE	
Steel, blue	
IP2	
M8 b	
Screw terminals 1 31 kg	29 kg
607 x 329 x 149 mm	565 x 320 x 148 mm
	303 X 320 X 140 Hilli
EN-IEC 60335-1, EN	N-IEC 60335-2-29,
EN-IEC 62109-1,	EN-IEC 62109-2
EN 55014-1,	
	neates on our website.
p to 25 °C ambient	
rogrammable relay which can be set for	r general alarm, DC under voltage or
	7 / 4 A, DC rating: 4 A up to 35 VDC and
	EN-IEC 62109-1, EN 55014-1, EN-IEC 61000-3-2, IEC 61000-6-1, IEC 610 Please consult the certi Please consult the certi on-linear load, crest factor 3:1 p to 25 °C ambient





Digital Multi Control Panel **VE.Bus Smart Dongle** A convenient and low-cost solution for monitoring For monitoring and control via Bluetooth and control. With an on/off together with the charger-only switch, full LED VictronConnect app. It readout and a rotary knob to also measures battery voltage and temperature.



Interface MK3-USB Needed to configure the MultiPlus, Can be used with the VictronConnect app or VE.Configure software. The interface connects to the MultiPlus via an RJ45 UTP cable and plugs into a USB port.



VictronConnect app Use to monitor or configure the MultiPlus using your phone tablet or PC.





Battery Monitor

To monitor battery state of charge via Bluetooth or the VRM portal. The BMV 712 Smart has display, while the SmartShunt does not have a display. Both communicate via Bluetooth and have a VE.Direct communication port.



set PowerControl and

PowerAssist levels.

