

Quattro Inverter/Charger

Lithium Ion battery compatible

www.victronenergy.co.nz



Quattro 48/5000/70-100/100



Quattro 48/15000/200-100/100



Ekrano GX or Cerbo GX

Provides intuitive system control and monitoring and enables access to our free remote monitoring website: the VRM Online Portal.



Two AC inputs with integrated transfer switch

The Quattro can be connected to two independent AC sources, for example the public grid and a generator, or two generators. The Quattro will automatically connect to the active source.

The main output has no-break functionality. The Quattro takes over the supply to the connected loads in the event of a grid failure or when shore/generator power is disconnected. This happens so fast (less than 20 milliseconds) that computers and other electronic equipment will continue to operate without disruption.

The second output is live only when AC is available on one of the inputs of the Quattro. Loads that should not discharge the battery, like a water heater for example, can be connected to this output.

Split phase option

A split phase AC source can be obtained by connecting our autotransformer (see data sheet on www.victronenergy.com) to a 'European' inverter programmed to supply 240 V / 60 Hz.

Three phase capability

Three units can be configured for three phase output. But that's not all: up to 4 sets of three 15 kVA units can be parallel connected to provide 144 kW / 180 kVA inverter power and 2400 A charging capacity.

PowerControl - Dealing with limited generator, shore side or grid power

The Quattro is a very powerful battery charger. It will therefore draw a lot of current from the generator or shore side supply (16 A per 5 kVA Quattro at 230 VAC). A current limit can be set on each AC input. The Quattro will then take account of other AC loads and use whatever is spare for charging, thus preventing the generator or mains supply from being overloaded.

PowerAssist - Boosting shore or generator power

This feature takes the principle of PowerControl to a further dimension allowing the Quattro to supplement the capacity of the alternative source. Where peak power is so often required only for a limited period, the Quattro will make sure that insufficient mains or generator power is immediately compensated for by power from the battery. When the load reduces, the spare power is used to recharge the battery.

Solar energy: AC power available even during a grid failure

The Quattro can be used in off grid as well as grid connected PV and other alternative energy systems. Loss of mains detection software is available.

System configuring

- In case of a stand-alone application, if settings have to be changed, this can be done in a matter of minutes with a DIP switch setting procedure.
- Parallel and three phase applications can be configured with VE.Bus Quick Configure and VE.Bus System Configurator
- Off grid, grid interactive and self-consumption applications, involving grid-tie inverters and/or MPPT Solar Chargers can be configured with Assistants (dedicated software for specific applications).

On-site Monitoring and control

Several options are available: Battery Monitor, Multi Control Panel, Color Control GX or other GX devices, smartphone or tablet (Bluetooth Smart), laptop or computer (USB or RS232).

Remote Monitoring and control

Color Control GX or other GX devices.

Data can be stored and displayed on our VRM (Victron Remote Management) website, free of charge.

Remote configuring

When connected to the Ethernet, systems with a Color Control GX or other GX device can be accessed and settings can be changed remotely.




VRM Portal

Our free remote monitoring website (VRM) will display all system data in a comprehensive graphical format. System settings can be changed remotely via the portal. Alarms can be received by e-mail or push notification.



VRM app

Monitor and manage your Victron Energy system from your smart phone and tablet. Available for both iOS and Android.

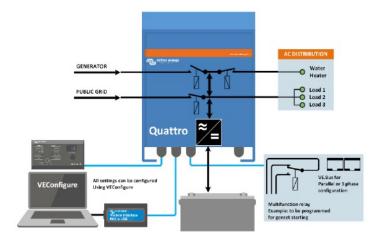

Quattro	12/3000/120-50/50	12/5000/220-100/100 24/5000/120-100/100	24/8000/200-100/100	48/10000/140-100/100	48/15000/200-100/10	
Quartio	24/3000/70-50/50	48/5000/70-100/100	48/8000/110-100/100	40/10000/140-100/100	46/13000/200-100/100	
	12/3000: 12 V battery	12/5000: 12 V battery	24/8000: 24 V battery	48 V	battery	
Nominal Battery Voltage	24/3000: 24 V battery	24/5000: 24 V battery 48/5000: 48 V Batttery	48/8000: 48 V battery			
PowerControl / PowerAssist			Yes			
ntegrated Transfer switch			Yes			
AC inputs (2x)			87-250 VAC Input frequency: 5			
Maximum feed through current (A)	2x 50	2x100	2x100	2x100	2x100	
Cw	6 kA 30 mS	10 kA 30 ms				
nput voltage range (VDC)			9,5 - 17 V 19 - 33 V 38 - 66	V		
Output (1)		Output voltage: 230 VAC ± 2 % Frequency: 50 Hz ± 0,1 %				
Cont. output power at 25 °C (VA) (3)	3000	5000	8000	10000	15000	
Cont. output power at 25 °C (W)	2400	4000	6400	8000	12000	
Cont. output power at 40 °C (W)	2200	3700	5500	6500	10000	
Cont. output power at 65 °C (W)	1700	3000	3600	4500	7000	
Peak power (W)	6000	10000	16000	20000	25000	
nput current (A DC)	250 / 125	458/238/118	381/188	235	350	
Maximum continuous Output current (A~)	11	19	30	37	53/50	
Power factor range	±0.8	±0.8	±0.8	±0.8	±0.8	
Maximum output fault current	32 A peak 1 sec.	53 A 1 sec.	100 A 1 sec	100 A 1 sec	150 A 1 sec	
Maximum efficiency (%)	93 / 94	94/94/95	94 / 96	96	96	
Zero load power (W)	20 / 20	30/30/35	60 / 60	60	110	
Zero load power in AES mode (W)	15 / 15	20 / 25 / 30	40 / 40	40	75	
ero load power in Search mode (W)	8 / 10	10/10/15	15 / 15	15	20	
		CHARGER				
Charge voltage 'absorption' (VDC)	14,4 / 28,8	14,4 / 28,8 / 57,6	28,8 / 57,6	57,6	57,6	
Charge voltage 'float' (VDC)	13,8 / 27,6	13,8 / 27,6 / 55,2	27,6 / 55,2	55,2	55,2	
Storage mode (VDC)	13,2 / 26,4	13,2 / 26,4 / 52,8	26,4 / 52,8	52,8	52,8	
harge current house battery (A) (4)	120 / 70	220 / 120 / 70	200 / 110	140	200	
Charge current starter battery (A)			4 (12 V and 24 V models only)			
Battery temperature sensor						
		GENERAL				
Auxiliary output (A) ⁽⁵⁾	25	50	50	50	50	
Programmable relay (6)	3x	3x	3x	3x	3x	
Protection (2)			a-g			
/E.Bus communication port			ase operation, remote monitorin	ig and system integration		
General purpose com. port	2x	2x	2x	2x	2x	
Remote on-off			Yes			
Common Characteristics	Operating temp.: -20 to +60 °C Humidity (non-condensing): max. 95 %					
Maximum altitude		ENCLOSURE	3500 m			
Common Characteristics	M		e RAI 5012) Protection categor	v: IP20 pollution degree 2 OVC	III	
Battery-connection	Material & Colour: aluminium (blue RAL 5012) Protection category: IP20, pollution degree 2, OVC III Four M8 bolts (2 plus and 2 minus connections)					
230 VAC-connection	Screw terminals 13 mm ²	Bolts M6	Bolts M6	Bolts M6	Bolts M6	
	(6 AWG) 19	34/30/30		51	72	
Veight (kg)	19	470 x 350 x 280	45 / 41	51	/2	
Dimensions (hxwxd in mm)	362 x 258 x 218	444 x 328 x 240	470 x 350 x 280	470 x 350 x 280	572 x 488 x 344	
		444 x 328 x 240				
		STANDARDS		155 (210)		
Safety			60335-1, EN-IEC 60335-2-29, EN			
mission, Immunity	E	N 55014-1, EN 55014-2, EN-IEC 6	1000-3-2, EN-IEC 61000-3-3, IEC		000-6-3	
Road vehicles			12 V and 24 V models: ECE R1	0-4		
Anti-islanding		2000-0-0-0-0-0-0-0-0-0-0-0-0-0-0-0-0-0-	See our website			
) Can be adjusted to 60 HZ. 120 V models available on re 2) Protection key:	equest	 Non-linear load, crest fac Up to 25 °C ambient 	tor 3:1			
a) output short circuit		5) Switches off when no ex				
b) overload	6) Programmable relay that	6) Programmable relay that can a.o. be set for general alarm, DC under voltage or genset start/stop function AC rating: 230 V / 4 A DC rating: 4 A up to 35 VDC, 1 A up to 60 VDC				
c) battery voltage too high	DC under voltage or gen					
d) battery voltage too low						
e) temperature too high		DC rating: 4 A up to 35 V	DC. 1 A up to 60 VDC			











Digital Multi Control Panel

A convenient and low-cost solution for monitoring and control. With an on/off charger-only switch, full LED readout and a rotary knob to set PowerControl and PowerAssist levels.

VE.Bus Smart Dongle

For monitoring and control via Bluetooth together with the VictronConnect app. It also measures battery voltage and temperature.

Interface MK3-USB

Needed to configure the MultiPlus, Can be used with the VictronConnect app or VE.Configure software. The interface connects to the MultiPlus via an RJ45 UTP cable and plugs into a USB port.

VictronConnect app

Use to monitor or configure the MultiPlus using your phone tablet or PC.

Battery Monitor

To monitor battery state of charge via Bluetooth or the VRM portal. The BMV 712 Smart has display, while the SmartShunt does not have a display. Both communicate via Bluetooth and have a VE.Direct communication port.



